




# BioChute Fizzytabs™

## Trash Chute and Dumpster Maintenance

- 
- Dramatically Reduce Odor In the chute and dumpster
  - Reduces flies and other insects (*by removing their food source*)
  - Prevents Residue Crusting (*makes the chute easier to clean*)
  - Degrades organic material
  - Non-Toxic, Non-Hazardous Safe to use around humans, plants and animals

**Easy  
To Use  
Effervescent  
Tablets!**



CONTENTS: 12 BioChute™ Fizzytabs™



# BioChute Fizzytabs™

## Trash Chute and Dumpster Maintenance

### Application Instructions:

Container: Purchase a new, wide mouth hand sprayer, or pump type pressure sprayer to use for this product. DO NOT USE THIS SPRAYER WITH OTHER CHEMICALS.

**Prepare the liquid:** Fill the sprayer with water, and drop in one (1) Bio-Chute™ Fizzytab™ and allow tablet to dissolve. Apply this mixture in one treatment, or, for better results, apply equal amounts on a daily basis.

### Application Rate: (based on building levels)


- 1-3 Levels: ONE (1) Bio-Chute™ Fizzytab™ every 3-5 days
- 3-10 Levels: ONE (1) Bio-Chute™ Fizzytab™ every 2-3 days
- 11+ Levels: ONE (1) Bio-Chute™ Fizzytab™ every 1-2 days
- 20+ Levels: TWO (2) Bio-Chute™ Fizzytabs™ every 1-2 days

Application rates are approximate. Each building is unique and application rate will vary based on amount of people in the building, temperature, type of waste, and actual spillage in the trash chute.

### Application Location:

Daily application of Bio-Chute™ can be applied at the ground floor, from a middle floor, or from the top of the building. Venting air flow will carry some of the product in the fine mist upward throughout the trash chute. Gravity will cause the larger water droplets to fall. For best results, rotate the application site throughout the month.

Bio-Chute™ is also available as a concentrated liquid for locations where automatic application equipment is available or preferred.

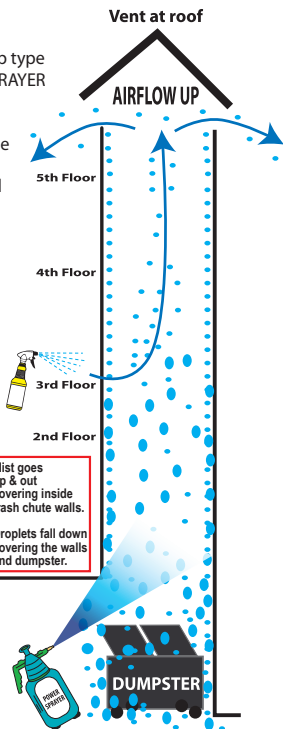

### Custom Biologicals, Inc.

1239 East Newport Center Drive, Suite 117  
Deerfield Beach, FL 33442 USA

Phone 561-998-1699 • Fax 561-998-2699

[www.BioChutefizzytabs.com](http://www.BioChutefizzytabs.com)

8



2